
Corridor Connector Instructions


1. Download template and printout
2. Cut out a strip to work on
3. Lightly score centre line (magenta)
4. Fold in half and flatten
5. Apply a layer of Pritt glue to one half (non printed side) then fold over and flatten
6. Lightly score individual segments along black lines
7. Trim around edges, use scissors for arches.
8. Fold alternate directions to form a concertina
9. Squeeze and drop between coaches.
10. If they don't hold, apply a dab of Pritt to the outer edges and adhere to coach doorway
11. On TS connectors squeeze and hold together and trim 0.5mm chamfer on top corners. See Picture below

TS template with chamfered corners

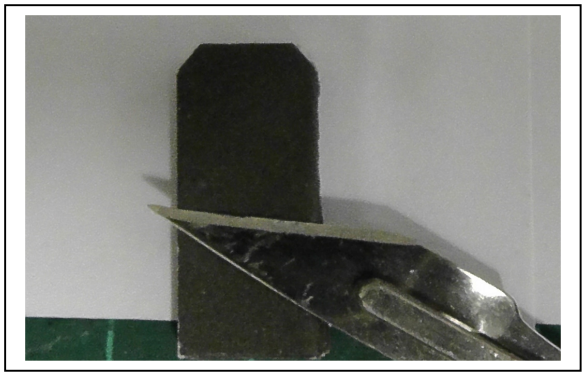


12. If using with TS (Transcontinental) travelling Post Office, the doorways are taller, so use the bottom row and cut around the extended end sections to ensure a correct fit.

Example Pictures

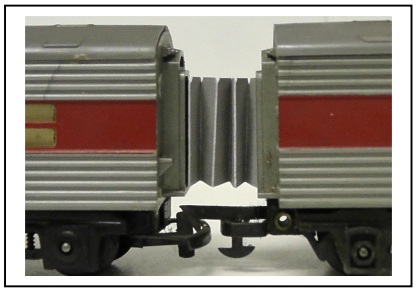


TS Silver

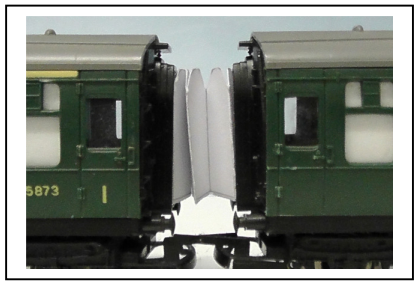


Standard Blank



Standard Black

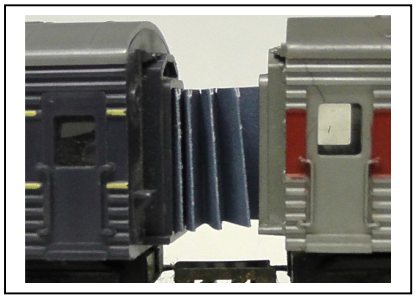

TS Blue

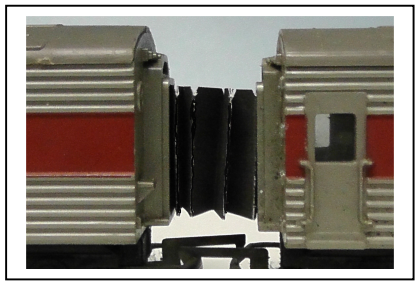

TS Black



Pullman Black

Copyright Deebeezy Art 2021